

How to Change a Double K Lever

Step 1 Remove the cover plate



Step 2 Remove washer (maybe stuck to the back of the cover plate)



Step 3
Remove the felts and lever using needle nose pliers



Step 4
Install greased lever, felts and washer



Step 5
Re-install the cover plate